




COD. 9004SHC
SANIMED

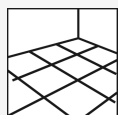

DESCRIPTION

Sanimed

MAIN FEATURES

Concentrated disinfectant for surfaces according to Italian Ministry of Health Reg. no. 20047. SANIMED concentrated disinfectant detergent, fungicidal, bactericidal and virucidal action, active against gram-positive, gram-negative bacteria, fungi, moulds, encapsulated and non-encapsulated viruses in domestic and professional environments.

TECHNICAL SPECIFICATIONS

Aspetto: Liquido trasparente verde

pH: 10,5 +/- 0,5

Specific weight [g/ml]: 1,000 +/- 0,020


100 g of product contain: Pure alkyl dimethylbenzylammonium chloride g 10, Co-formulants(*), colouring agents and water to g 100.

HOW TO USE AND DOSING

Routine cleaning: 0.5% 25 ml in 5L

Stubborn dirt and disinfection bacteria and yeasts: 1.5% 75 ml in 5L

Virucidal action: 5% 250 ml in 5L

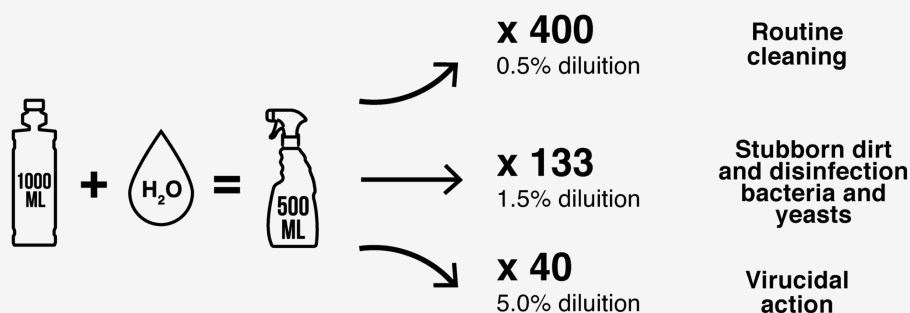

ADDITIONAL INFORMATION

Microbiological activity tests: EN1276 "Bactericidal activity with interfering substances", EN1650 "Fungicidal activity with interfering substances", EN13697 "Bactericidal/fungicidal activity non-porous surface test", EN14476 "Virucidal activity suspension test", EN16777 "Virucidal activity non-porous surface test".

PRODUCT COMPATIBILITY

When following the recommended instructions for use, it can be used on all materials commonly found in kitchens/used for manufacturing the various utensils. If in doubt, test compatibility with the materials on a small hidden part before use.



PALLETIZZAZIONE		
CODE	9004SHC	
Pcs x Box	6	
Box x Layer	21	
Box x Plt	105	
EAN	8050999572738	
Volume	L	Fl. Oz.
	1	33.81
Peso	Kg	Oz.
	1.1	38.80

Rev: 20250514

ITALCHIMICA SRL - Riviera dei Maestri del Lavoro, 10 - 35127
Padova (PD) - ITALY / Phone +39 049 8792456 Fax +39 049
8791424 - info@italchimica.it - www.italchimica.it

USE & STORAGE PRECAUTIONS

"The product is formulated for professional use only. Store in the original containers. Avoid extreme temperatures. For more information on use and disposal, consult the safety data sheet.

Prepare the solutions at the time of use and use within a maximum of 48 hours. The products at the use concentration do not require PPE."

COMPLIANCE

The surfactants contained are biodegradable according to the criteria defined by European Directive 648/2004/EC and subsequent amendments. Product registered as a Medical Surgical Device - Registration number 20047.

CHEMICAL COMPOSITION

See the safety data sheet for more information on the product's ingredients.