



For other languages, please visit www.polymaker.com

INDEX

1.0	Printing with PolySupport™	4
2.0	PolySupport™	
2.1	Product data sheet	6
2.2	Product comparison charts	7
3.0	Product Families	
3.1	PolyLite™	8
3.2	2 PolyMax™	8
3.3	5 PolyFlex™	8
3.4	PolyMide™	9
3.5	5 PolyDissolve™	9
3.6	5 Specialty	9


4.0 Polymaker Technologies			
4.1	Jam-Free™	10	
4.2	Warp-Free™	10	
4.3	Ash-Free™	10	
4.4	Layer-Free™	11	
4.5	Nano-Reinforcement	11	
4.6	Stabilized Foaming™	11	
5.0 I	Hardware		
5.1	PolyBox™	12	
5.2	Polysher™	13	
6.0	About Polymaker	14	
7.0 Contact Us 15			

Printing with PolySupport[™]

1) Prepare the gcode

Download the MyFirstPrint.stl on **www.polymaker.com** Load the stl file in your favorite slicer.

Enter the correct settings for PolySupport[™];



Before we discuss the printing settings for **PolySupport™**, it is important that we identify the two different types of support structures. Generally speaking, we classify support structures into two categories: open support and closed support.

Open support: Support that does not enclose any portion of the model. Open support can usually be removed in a single piece.

Closed support: Support that encloses some portion of the model. In this case the support must be broken apart and separated in order to be removed from the finished part.

Open support

- Support density: Since open support can be removed in a single piece, we recommend a high support density (40% or more) with 2 layers of solid interface to obtained better surface finish.

Threshold overhang angle: Most 3D printers can print overhang angles up to 45°, so it is recommended that the threshold overhang angle be set at 45°.
Support infill pattern: For open support, since the support structure can be removed relatively easily, perpendicular infill is generally recommended.

Closed support

- Support density: It is recommended that a support density in the range of 15% - 30% is used for closed support for easy removal.

- Threshold overhang angle: similar with open support, a threshold overhang angle of 45° is generally recommended.

- Support infill pattern : It is recommended that the infill always be parallel for closed support to better break it away.



Note: A dense support interface between the model and the support can also be used to improve the surface quality of the supported face. We recommended 2 dense layers at 90% infill.



PolySupport[™] is a break away support for Polymaker PLA based filaments. It has a perfect interface with PLA, strong enough to support it and easily removable by hand.

Available colors:

Physical properties

Property	Testing method	Typical value
Density	ASTM D792 (ISO 1183, GB/T 1033)	1.22 (g/cm³ at 21.5 °C)
Melt Index	220 °C, 2.16 kg	3-6 (g/10 min)

Mechanical properties

Material	Combination	++ : support the model verv well	
PLA based material from Polymaker's portfolio	++	+: generally support the	
PETG based material from Polymaker's portfolio	-	model depending on its geometry	
ABS based material from Polymaker's portfolio	-		
PC based material from Polymaker's portfolio	+	-: generally don't support the model depending on its geometry	
PVB based material from Polymaker's portfolio	+		
TPU based material from Polymaker's portfolio	+	: do not support the	
Nylon based material from Polymaker's portfolio		model	

Drying settings


Diameter accuracy (2.85/1.75 mm):

80°C for 8h

iotor at		00/ 11/ 0 11111/.	weight	
70%	is within	+/- 0.01	600g	+/-
97%	is within	+/- 0.02	750g	+/-
99%	is within	+/- 0.03	1000g	+/-
99.9%	is within	+/- 0.04	3000g	+/-

Weight accuracy:

600g	+/-	20g
750g	+/-	20g
1000g	+/-	30g
3000g	+/-	60g

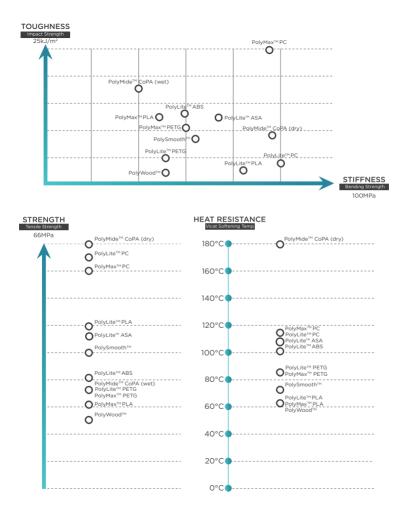



PolyLite[™]

ABS, PETG, PLA, PC, ASA

PolyLite[™] is a family of 3D printing filaments made with the best raw materials to deliver exceptional quality and reliability. PolyLite[™] covers the most popular 3D printing materials to meet your everyday needs in design and prototyping.



PolyMax[™]

PLA, PC, PETG, 🛱 PC-FR

PolyMax™ is a family of advanced 3D printing filaments produced with Polymaker's Nano-reinforcement technology, to deliver exceptional mechanical properties and printing quality.



PolyFlex™

TPU90, TPU95, 🖨 TPU95-HF

PolyFlex™ is a family of high-quality flexible materials. It provides the perfect solution for applications where high flexibility and durability are required.



PolyMide[™] CoPA, ✿ PA6-CF, ✿ PA6-GF

PolyMide[™] is a family of Nylon/polyamide based filaments. Produced with Polymaker's Warp-Free[™] technology, PolyMide[™] filaments deliver engineering properties intrinsic to Nylon and ease of printing.



PolyDissolve[™]

S1, S2

PolyDissolve™ is a family of dissolvable support filaments. This family offers support solution for our portfolio of filaments. It enables a greater design freedom.



Specialty

PolyWood[™], PolySupport[™], PolySmooth[™], PolyCast[™]

✿ Polymaker™ PC-ABS, ✿ Polymaker™ PC-PBT

The Specialty family provides unique filaments from Polymaker to unlock new 3D printing applications.



Hardware

Polysher[™], PolyBox[™]


Polymaker offers 3D printing accessories to optimize the user experience with their filaments.

Technologies

JAM-FREE™

Jam-Free[™] technology improves the heat stability of Polymaker's PLA filaments with softening temperatures over 140 °C. As a result, Polymaker's PLA filaments show minimal softening in the "cold end" and can melt rapidly once entering the heating zone, leading to excellent printing quality with zero risk of nozzle jams.





WARP-FREE™

Warp-Free[™] technology enables the production of Nylon-based filaments that can be 3D printed with excellent dimensional stability and near-zero warpage. This is achieved by the fine control of micro-structure and crystallization behavior of Nylon, which enables the material to fully release the internal stress before solidification.

ASH-FREE™

Ash-Free™ technology allows Polymaker's filament which has been designed for investment casting to burn off cleanly without any residue, enabling defect-free metal parts. 3D printing has been used to produce investment casting patterns as it cuts down both the cost and lead time for small-volume production runs. Without Ash-Free™ Ash content: 0.5%



With Ash-Free™ Ash content: 0.003%



LAYER-FREE™

Layer-Free™ technology involves exposing a 3D printed part to an aerosol of micro-sized alcohol droplets, generated by a rapidly vibrating, perforated membrane called the nebulizer. The aerosol will then be adsorbed by the surface of the 3D printed part and render it smooth and layer-free.





NANO-REINFORCEMENT

Nano-reinforcement technology is applied to produce filaments with excellent mechanical properties and printing quality. It dramatically improves the toughness of the material by increasing its impact resistance.

STABILIZED FOAMING™

Stabilized Foaming[™] technology is used to produce foamed filaments, whose foam structure can survive the printing process and be inherited by the printed parts. This enables light weight 3D printed parts with unprecedented surface finish. Wood









FIBER ADHESION™

Fiber Adhesion™ technology improves the layer adhesion of fiber reinforced materials, by optimizing the surface chemistry of the fibers to achieve better dispersion and bonding to the matrix. This results in better strength along the Z-axis and reduced mechanical anisotropy.

()Hardware

Polymaker offers 3D printing accessories to optimize the user experience with their filaments.

PolyBox™

PolyBox[™] is a dry storage box designed to provide the optimum environment for 3D printing filaments. The PolyBox[™] is compatible with all 3D printers and can house two 1kg spools or one 3kg spool.

Polysher[™]

The Polysher™ is a desktop post processing unit designed to remove layer lines from PolySmooth™ and PolyCast™ prints. The Polysher™ uses Polymaker's Layer-Free™ technology to create a fine mist of alcohol which evenly smooths the model.





Monitor your prints from anywhere with

The Spaghetti Detective's automatic failure detection can give added peace of mind, help prevent messy failures, and keep your printer up and running longer.






MANAGE PRINTING REMOTELY





SAVE TIME & MONEY

Overview

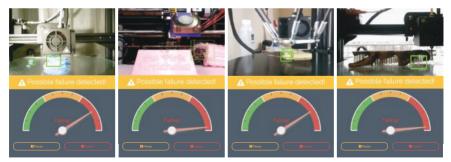



Scan to Learn More

thespaghettidetective.com/polymaker.html

Polymaker hereby declares that our company and the above-mentioned company are only for commercial cooperation. There is no affiliation between Polymaker and the above-mentioned company, and Polymaker does not act as an agent of the above-mentioned company.

About Polymaker

Our Values



Mission

Polymaker is committed to lowering the barriers to innovation and manufacturing, by continuously developing advanced 3D printing material technologies for industries and consumers.

Contact us

For any inquiries or technical support, please contact: support@polymaker.com

The information provided in this document is intended to serve as basic guidelines on how particular product can be used. Users can adjust the printing conditions based on their needs and actual situations. It is normal for the product to be used outside of the recommended ranges of conditions. Each user is responsible for determining the safety, lawfulness, technical suitability, and disposal/recycling practices of Polymaker materials for the intended application. Polymaker makes no warranty of any kind, unless announced separately, to the fitness for any particular use or application. Polymaker materials in any particular application

